

Please be advised that some toner refill kits may be compatible with multiple toner cartridges.



Brother – TN110/TN115

[CLICK HERE TO GO THE INDEX](#)

#### REQUIRED FOR A SUCCESSFUL REFILL:

- Toner (Uni-Kit Refill Kit for TN110/TN115)
- 1 funnel cap

#### General Refilling Procedures:

Use a flathead screwdriver to pop out the large plastic plug found on the side of the side of the cartridge.



**IMPORTANT:** You must dispose of any original toner in the cartridge as much as possible before refilling. Dispose of toner properly into a trash can, or use a vacuum with a hose for best results (if possible).

Before opening the bottle of toner, turn it upside down and tap it on a table to loosen the toner and allow it to flow freely. Remove the cap and pull the seal off the bottle. Attach the funnel cap making to sure it is on tightly. Tilt the funnel cap toward the filling hole and insert it into the hole. If the toner stops flowing before the cartridge is full, simply remove the toner, close the cap, turn the bottle upside down and tap it on a table. Once the cartridge is full, seal the hole with the plug by twisting it until it is completely seated. Now gently shake the cartridge side to side to distribute the toner.



#### Resetting the counter (Reset Gear)

Using the illustration below as a guide, remove the 2 screws indicated with red circles. Once the screws have been removed, carefully and gently (with a Flathead screwdriver) unlock the side panel and remove the side cap.

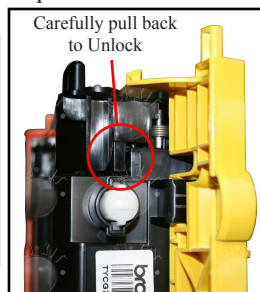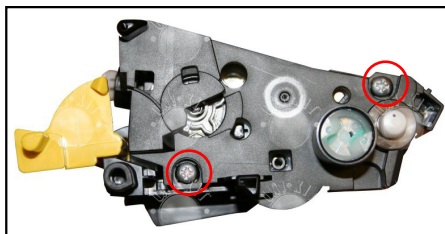

The 2 pictures on the right show how the gear should be set in order to reset the counter. Carefully remove the gear and the pin holding it in place. Turn the gear clock wise and replace it so that it meshes and matches the “Properly Resetted” picture to the right. Re-install the pin so that it holds the gear down. Once the gear is resetted, re-install the side cap, and place the screws firmly back in place. Your cartridge is ready to be used.



Not Resetted

Properly Resetted



© All rights reserved, Easy Group, LLC. Version 3.0

All trademarks are property of their respective owners. Uni-Kit® has no association with any of the manufacturers listed here such as Hp, Epson, Lexmark, Xerox, etc. All logos and brand names shown here are used for identification purposes only. It is illegal to reproduce these instructions without written licensing consent from Easy Group LLC.